







 



# VIDEO ADAPTER SELECTOR GUIDE

MY SOURCE	I'M CONNECTING TO			
	DISPLAYPORT 	HDMI 	DVI 	VGA 
DISPLAYPORT 	VCB-DP-xxxx-MM	VA-DP12-HDMI4K-A	VA-DP-DVID-A	EVNDPVGA-MF-R3
MINI-DISPLAYPORT 	VA-MDP12-DP12	VA-MDP12-HDMI4K-A	ENVMDPDVI-xxxx-MF	ENVMDPVGA-xxxx-MF
HDMI 	NA	VCB-HDMI-xxxM	FA790	VA-HDMI-VGA
DVI 	NA	VA-DVID-HDMI	EVNDVI02-xxxx	VA-DVII-VGA
VGA 	NA	NA	VA-VGA-DVII	EVNPS06-xxxx-MM
USB-C 	VA-USBC31-DP12	NA	VA-USBC31-DVID	VA-USBC31-VGA
COUPLERS	VA-DP-CPL	VA-HDMI-CPL	VA-DVI-CPL	NA

